

Cube Series RV User Manual and Warranty

Welcome to the family of the Cube Series recreational vehicle owners. We thank you for selecting a Cube Series product.

Your new Cube Series RV has been designed to provide carefree traveling for you and your family. This Owner's Manual provides helpful suggestions and useful information to help you get the maximum enjoyment from your new truck camper and or trailer.

Like your truck and tow vehicle, your Cube Series will require some regular care and maintenance. This manual is structured to inform you with a good working knowledge of your new camper or trailer.

Cube Series recommends that you become familiar with the contents of this Owner's Manual before using your RV. Every effort has been made to make this Owner's Manual as accurate as possible. Products are constantly being improved and manufacturers upgrade installations accordingly. In the event of conflicting instructions, illustrations or other descriptions, the information furnished by the respective manufacturer's separate publications should be followed. Often you can find updated information on our website www.cubeseries.com for the most current information.

Your new Cube Series has been constructed to conform with or exceed federal and state safety requirements. Quality assurance methods and/or functions meet or exceed standards prescribed by ANSI/NFPA 501C or CSA Z240 as approved by the agency having jurisdiction in the United States or Canada.

Please contact your dealer should you have any additional questions as to operation, maintenance, or service.

Please take time to read warranty information. Please fill out and mail in the included warranty card. for questions or concerns please call this number Toll Free: 855-718-8741 or use the warranty form here:

www.cubeseries.com/warranty

Cube Series Owner's Manual

Consider this Owner's Manual a permanent part of your Cube Series. Keep it with the Trailer/Camper at all times. If you sell the unit, the new owner will appreciate the operating, safety and maintenance

information contained in this Owner's Manual. Also keep all the manuals and tags furnished with the appliances and other equipment installed in your RV.

One-year Limited Warranty

FOR TRUCK CAMPERS, TRAVEL TRAILERS MANUFACTURED BY Cube
Series MANUFACTURING
SOLD IN THE UNITED STATES AND CANADA.

1. COVERAGE PROVIDED

Your new RV, including the structure, plumbing, heating, and electrical systems and all appliances and equipment installed by the manufacturer, is warranted under normal use to be free from manufacturing defects in material and workmanship.

This limited warranty extends to the first retail purchaser and his transferee(s) and begins on the date of original retail delivery or the date the RV is first placed into service as a rental, commercial or demonstrator RV (whichever occurs first). This limited warranty extends for a period of one year from such date. Written notice of defects must be given to the selling dealer or the manufacturer not later than 30 days after the expiration of the applicable limited warranty. Warranty repairs, if required, will be made without charge after your RV is taken to the dealer or manufacturing plant location.

OWNER'S OBLIGATIONS

The owner is responsible for normal maintenance as described in the Owner's Manual; however, minor adjustments (such as adjustments to the interior or exterior doors, LP regulator pressure, cabinet latches, TV antenna control, etc.) will be performed by the dealer during the first 180 days of warranty coverage. Thereafter, such adjustments are the responsibility of the owner as normal maintenance unless required as a direct result of repair or replacement of a defective part under this limited warranty.

DEALER'S OBLIGATIONS

By agreement with the manufacturer, the dealer is obligated to maintain the RV prior to the retail sale, to perform a detailed pre delivery inspection and to repair or replace any parts necessary to correct defects in material or workmanship.

WHEN A DEALER DOES NOT RESOLVE A PROBLEM

If the dealer is unable or unwilling to resolve a problem which the owner is convinced is covered by this limited warranty, he or she should contact Cube Series Manufacturing at the address listed online here:

www.cubeseries.com/warranty with a description of the problem and attempts made to resolve it.

MANUFACTURER'S OBLIGATIONS

Upon receipt of notice of notice of a claim which the dealer was unable or unwilling to resolve, Cube Series Manufacturing will repair or replace any

parts necessary to correct defects in material or workmanship or will take other appropriate action as may be necessary.

2. THIS LIMITED WARRANTY DOES NOT COVER THE FOLLOWING

- a. All major appliances, which are covered by the separate warranty of the manufacturer. Please refer to all manuals included in the Owner's packet.
- b. Damage caused by or related to:
 1. Accidents, misuse, or negligence
 2. Failure to comply with instructions contained in the Owner's Manual
 3. Alteration or modification of the RV.
 4. Environmental conditions (salt, hail, chemicals in the atmosphere, UV light, etc.)
- c. Normal deterioration due to wear or exposure, i.e., fading of fabrics, drapes, carpet wear, etc.
- d. Normal maintenance and service items such as light bulbs, fuses, lubricants, etc.
- e. Extra expenses such as transportation to and from dealer or manufacturing plant location, loss of time, loss of pay, loss of use of the RV, inconvenience, commercial loss, towing charges, bus fares, vehicle rental, incidental charges such as telephone calls or lodging bills, or other incidental or consequential damages.

! NOTICE !

THIS OWNER'S MANUAL IS OF GENERAL NATURE ONLY AND DOES NOT COVER EVERY ASPECT OF ALL MODELS OF RV'S MANUFACTURED BY CUBE SERIES MANUFACTURING.

DUE TO ONGOING DESIGN DEVELOPMENT AT CUBE SERIES, IT IS POSSIBLE THAT RECENT PRODUCT CHANGES MAY NOT BE INCLUDED IN THIS OWNER'S MANUAL. THIS MANUAL IS INTENDED AS A GUIDE ONLY AND IN NO WAY EXTENDS THE RESPONSIBILITY OF CUBE SERIES BEYOND THE WARRANTY PRINTED IN THIS MANUAL.

ALTERING OR MODIFYING YOUR CAMPER OR TRAILER

If you plan on making any alterations or modifications to your RV, please check with your dealer or call the factory before getting started. Even when doing something that seems simple, the potential hazard of a drill, screw or nail penetrating an unseen LP gas line or electrical circuit might be avoided by checking with technical support before you start. Double check to make sure that any alterations or modifications that you plan to do to your RV will not VOID your warranty.

Your Cube Series Truck Camper and or Travel Trailer may or may not have some or all of the following equipment. The following is recommendations, safety concerns and instructions for proper usage, practical application and best practices while operating these systems.

LPG SYSTEM (LIQUEFIED PETROLEUM GAS)

The furnace, range, oven, water heater, refrigerator, and generator all operate on LPG.

LPG is a colorless, highly flammable gas which has been treated chemically to have a pungent odor smelling like garlic. This helps the user to detect the presence of the gas. LPG is heavier than air, therefore, it displaces the air in low pressure environments and could cause suffocation or explosion if not detected.

The two most common types of LPG are butane and propane. Both types work equally well in the LPG system of your RV. Butane can only be used down to a temperature of 32 F above zero. Propane can be used down to a temperature of 40 F below zero. Your LP Gas dealer will supply you with what best fits your area.

LPG TANKS: The LPG gas tanks are tested as high-pressure cylinders. LPG is stored in these tanks under high pressure which maintains the LPG in a liquid/vapor condition. The 10% valve or pressure relief valve has been located at the top of the tank so that it is always in a vapor area. If the tank is overfilled or the temperature of the tank is raised, this valve will release. **THIS VALVE SHOULD BE HAND TIGHTENED ONLY AT ALL TIMES.**

LP GAS PRESSURE REGULATOR: the two-stage LPG pressure regulator reduces the high pressure vaporized LPG down to a pressure of a 13" water column. At this pressure LPG is piped to and used by the various Gas Fired systems. Do not make any adjustments to the LPG pressure regulator. Adjustment should and always be performed by an authorized RV Dealer or by your Selling Dealer.

FURNACE: The furnace operates on LP gas fuel. Before using the furnace, please read the Owner's Manual supplied by the manufacturer of the furnace for a complete understanding of how to safely light and use the furnace as intended by the manufacturer. Be sure all heat registers are open and unobscured to prevent the furnace from cycling due to excessive heat buildup in the chamber.

WATER HEATER: The water heater operates on LP fuel. Before using the water heater be sure to read the Owner's Manual supplied by the manufacturer of the water heater for a complete understanding of how to safely light and use the water heater as intended by the manufacturer. Controls for the water heater are located behind the access panel on the outside of the RV. Your RV is equipped with a Direct Spark Ignition system (DSI). Please read the Owner's Manual supplied by the manufacturer for proper lighting procedure. If you have the optional Direct Spark Ignition system with LP gas and 120-volt element, please read the owner's manual supplied by the manufacturer for the optional DSI gas/electric water heater for the proper lighting procedure.

! NOTICE !

Before turning on the water heater be sure that the water heater is filled with water. Also be sure that the water heater bypass valve (used for winterization) is not in the bypass position and water enters the tank.

GENERATOR (optional equipment): Some generators operate on LP gas. For detailed operation and maintenance instructions refer to the included Owner's Manual supplied by the manufacturer. **IMPORTANT:** Always check to make sure that the generator has adequate ventilation and the vents and/or exhaust have not been blocked by snow or other objects that may damage the exhaust pipe and restrict flow of exhaust away from the vehicle. **AVOID THE DANGER OF CARBON MONOXIDE (CO) POISONING** read the owner's manual for a complete understanding of how to safely operate the generator. It is never recommended to run the generator while occupants are sleeping. **IMPORTANT:** Always be sure that your CO detector is operating.

BEFORE OPERATION: OPEN OVERHEAD VENT OR TURN ON EXHAUST FAN AND OPEN WINDOW:

The above warning label is located in the cooking area to remind you to provide an adequate supply of fresh air for combustion. Unlike homes, the amount of oxygen supply is limited due to the limited amount of space inside RVs. Proper ventilation when using the cooking appliance(s) will avoid dangers of asphyxiation. It is especially important that cooking appliances not be used for comfort heating as the danger of asphyxiation is greater when the appliance is used for long periods of time.

! WARNING !

PORTABLE FUEL-BURNING EQUIPMENT, INCLUDING WOOD AND CHARCOAL GRILLS AND STOVES, CANNOT BE USED INSIDE THIS RECREATIONAL VEHICLE. THE USE OF THIS EQUIPMENT INSIDE THE RV MAY CAUSE FIRES OR ASPHYXIATION.

! WARNING !

Do not bring or store LP gas containers, gasoline, or other flammable liquids inside the RV at any time because a fire or explosion may result.

A warning has been located near the LP gas container. It reads:

DO NOT FILL CONTAINER(S) TO MORE THAN 80 PERCENT OF CAPACITY.

Overfilling the LP Gas container can result in uncontrolled gas flow which can cause fire or explosion. A properly filled container will contain approximately 80 percent of its volume as liquid LP gas.

A warning has been placed in the vehicle near the range:

IF YOU SMELL GAS

1. Extinguish any open flamed, pilot lights and all smoking materials.
2. Do not touch electrical switches.
3. Shut off the gas supply at the tank valves or gas supply connection.
4. Open doors and other ventilating openings.

5. Leave the area until the odor clears.
6. Have the gas system checked and leakage source corrected before using again.

THE POWER CENTER: The power center will supply 12-Volt requirements when your RV is operating on 120AC Volts. Thus, you will not have to worry about running down the battery. When you are plugged into 120-Volt AC service, the power center automatically switches the load from the battery to the power center. The onboard battery will gradually be brought back up to a full charge and maintained by the battery charger if 120-volt power is available.

Do not use a two-conductor extension cord or any cord or cable that does not assure appropriate and adequate ground continuity.

120-VOLT AC SYSTEM: This system provides grounded electrical service for appliances such as the air conditioner, TV, microwave oven, 110-volt outlets, etc. The 120-Volt system also provides a power source for the power center.

Your RV is equipped with a heavy-duty power supply cord. Some RVs have cords that are not permanently connected to the main breaker box. In that case you must connect the power cord to the power supply outlet which is located on the exterior of the unit. The other end of this cord has a plug that can be connected to an external 120-Volt AC power outlet. The Breaker Box (Power Center) is located on the inside of the unit. If the Breaker Box trips open a circuit, you may be using too many portable appliances. Unplug all the appliances and reset the breaker that tripped. If the breaker trips again, contact your servicing dealer or a certified electrician. In this case, do not use the circuit again before it is inspected. If the breaker remains on after reset, plug in only a few of your appliances instead of all of them at once. The outlet receptacles only operate on 120-Volt AC power.

1. **MICROWAVE OVEN:** The microwave oven operates on 120-Volt AC power provided by either a 120-Volt power receptacle or a Generator (optional equipment). For detailed operating information please refer to the owner's manual provided for this appliance.
2. **AIR CONDITIONER (option):** The Air Conditioner operates on 120-Volt AC power provided by either a 120-Volt power receptacle or a Generator (optional equipment). Be sure to turn on the circuit breaker on before operation. For detailed operating information please refer to the owner's manual provided for this appliance.
3. **FANTASTIC VENT (option):** The Fantastic Vent operates on 120-Volt power. For detailed operating information please refer to the Owner's manual provided.
4. **A/M F/M STEREO TAPE OR CD PLAYER (option):** For detailed operating information please refer to the Owner's manual provided.
5. **TV ANTENNA (option):** For detailed operating information please refer to the Owner's manual provided.

6. **SMOKE DETECTOR:** A battery powered smoke detector complying with ANSI A119.2/NFPA 501C is mounted on the ceiling in the living/cooking area of the RV. For detailed operating information please refer to the Owner's manual provided.
7. **ELECTRIC 12-VOLT DC WATER PUMP:** The onboard freshwater system is pressurized by a self-priming, 12-Volt water pump. The water pump operates automatically when the water pump power is switched ON and a faucet valve is opened. Turn the water pump ON to pressurize the system. When a faucet is opened after the initial filling of the lines, the faucet may sputter and spray out as the air in the lines is forced out. This is normal and is no cause for concern. In the ON position, the water pump delivers water to the water heater and faucets and maintains positive pressure throughout the system. It is recommended to turn the water pump OFF when you are away from the RV. **IMPORTANT:** Do not operate the water pump without water in the system.
8. **ELECTRIC POWER JACKS (optional equipment):** Electric power jacks operate with a remote control or rocker switch located on the jacks. Should a malfunction occur, unplug the remote-control cord immediately and/or shut off the 12-Volt kill switch. **IMPORTANT:** Do not exceed the full extension of the jacks (noted by red marks on each of the jack's legs) Over extension may damage the jacks and may result in a blown fuse or circuit breaker in the system. Check to be sure all four jacks are fully retracted and in position before traveling.
9. **REAR AWNING OR SIDE BOX AWNING (optional equipment):** For detailed operating information please refer to the Owner's manual provided.
10. **GROUND FAULT INTERRUPTER:** Kitchen and patio 120-Volt electrical outlets are protected by Ground Fault Interrupter (GFI). This device is provided compliance with ANSI A119.2/NFPA 501C requirements and is intended to protect you against the hazards of line to ground electric faults and electrical leakage shocks possible when using electrical appliances in the kitchen, or damp areas inside or outside of the unit. Whenever you plug your 120-Volt system into shore power, it is recommended that you verify that the adapter and power source are wired in proper sequence. Occasionally we have found that some home or garage wiring installations have been done improperly. Even though your RV may seem to be operating properly, there is danger of electrical shock-especially in wet areas-if power source wiring has been incorrectly installed in the home, garage, or other facility. If the shore power has been improperly wired, the built-in safety devices may not function correctly. If you suspect that an external extension cord or adapter may not have been supplied by a properly licensed electrician, be sure to check the power source before use to avoid the danger of an electrical shock.
11. **SOLAR PANEL SYSTEMS (option):** For detailed operating information please refer to the Owner's manual provided.
12. **LITHIUM BATTERY SYSTEM (option):** For detailed operating information please refer to the Owner's manual provided.

WATER SYSTEMS

FRESH WATER SYSTEM

Fresh water is supplied to the RV by two possible sources.

1. The external hookup (city or park water)
2. Self-contained water (on board storage tank)

To use the external water system, connect the water hose from the city or campground source to the side of the unit (labeled city water) be sure to run the hose to get the air out of the line before connecting the hose to the RV. A check valve at the water pump prevents city water from being fed back through the water pump and into the freshwater tank. Another check valve prevents the water pump from pumping water out of the city water connection when the self-contained water system is in use. The water heater is equipped with a safety-relief valve which will open in the event of a pressure surge. The water system has been tested for leaks at 90-100 PSI at the factory.

IMPORTANT: EXCESSIVE WATER PRESSURE. Some cities or campground water systems may operate at pressures that can damage the water system in your RV or cause water pump failure. If pressure at your site is over 70 PSI, you must use a pressure regulator. The recommended pressure range is from 35 PSI to 45 PSI. Your RV supply dealer can advise you on the best choice regarding water pressure regulators.

IMPORTANT: the 12-Volt DC water pump switch should be in the OFF position when the RV is connected to a city or campground water source.

SELF-CONTAINED WATER SYSTEM: The fill spout (Gravity Fill) for the on-board water system is located on the outside of the RV. The 12-Volt DC water pump supplies the pressure for the self-contained water system. You can check the appropriate water level by pressing the "water" rocker switch on your tank monitor panel. Erroneous readings could be caused by water with low mineral content.

FRESH WATER FILL INSTRUCTIONS: The access door for the freshwater fill spout is located on the exterior sidewall of the RV. The fill spout is connected by a hose to the onboard freshwater storage tank. There is a small vent hole adjacent to the filler spout. This vent relieves air from the onboard freshwater tank.

1. Fill slowly and be sure that the hose you use to fill the on-board water storage tank is smaller than the water fill opening to allow excess water and air to escape as the tank fills. The higher the pressure of water you force into your tank, the greater the likelihood of damage to your RV. When you force water into a water tank you can balloon a 40-gallon water tank to accept 60-gallons of water swelling the tank to a size too large to be contained in the area that houses the tank. This pressure can tear apart the structure of the floor on your RV.
2. Do not leave the RV unattended while filling.
3. Do not wedge the water hose into the fill spout.
4. "Full Condition" indication is when water is back flushing by the water hose and out of the air vent adjacent to the fill spout.
5. Discontinue filling immediately on observation of "full" signal.

MORE TRUCK CAMPER SPECIFIC ITEMS

CAMPER JACKS: Consult the manufacturer's instruction manual for safe operation and regular maintenance required for the type of jacks mounted on your camper.

MANUAL CAMPER JACKS: Manual camper jacks are raised and lowered with a crank handle and or a power drill with a proper attachment which inserts in the receptacle located at the top of each individual jack.

WARRANTY AND SERVICE

This LIMITED WARRANTY covers only recreational vehicles sold in, and remain in, the united states, US territories and Canada and used for the intended purpose of recreational travel and camping. If a substantial defect in material or workmanship, attributed to Cube Series RV is found to exist and is reported to Cube Series or an authorized Dealer during the applicable warranty period it will be repaired or replaced at, Cube Series option, without charge to the RV owner, in accordance with the terms, conditions and limitations of this limited warranty.

This limited warranty applies to the first consumer purchaser of a new RV only. All rights and limitations of this warranty are applicable to the original owner of the RV only. You may contact an independent, authorized dealer for details concerning an extended warranty option.

LIMITATIONS, EXCLUSIONS AND DISCLAIMER OF IMPLIED WARRANTIES:
ANY IMPLIED WARRANTY THAT IS FOUND TO ARRISE BY WAY OF STATE OR FEDERAL LAW, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR ANY IMPLEID WARRANTY OF FITNESS, IS LIMITED IN DURATION TO THE DURATION SET FORTH IN THIS LIMITED WARRANTY AND IS LIMITED IN SCOPE OF COVERAGE TO THE SCOPE OF COVERAGE TO THIS LIMITED WARRANTY. ALL IMPLIED WARRANTIES AND CONDITIONS STATUTORY OR OTHERWISE, ARE DISCLAIMED IN THEIR ENTIRETY AS TO THE RVs OR COMPONENTS OF RVs EXCLUDED OR NOT COVERED UNDER THIS WARRANTY.

CUBE SERIES RV SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES THAT MAY RESULT FROM BREACH OF THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTY. BY WAY OF EXAMPLE, CONSEQUENTIAL DAMAGES INCLUDE FUEL AND TRANSPORTATION EXPENSES TO DELIVER THE RV TO A SERVICING DEALER, HOTEL ROOMS, LOST WAGES, AS WELL AS CONSEQUENCES OF MOISTURE DAMAGE SUCH AS MOLD, AND MILDEW AS WELL AS RUST AND CORROSION. THIS EXCLUSION OF CONSEQUENTIAL AND INCENTITAL DAMAGES SHALL BE INDEPENDENT OF ANY FAILURE OF THE ESSENTIAL PURPOSE OF ANY WARRANTY, AND THIS EXCLUSION SHALL SURVIVE ANY DETERMINAITON THAT THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTY AS FAILED OF ITS ESSENTIAL PURPOSE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusion may not apply to you.

ONE YEAR OF COVERAGE

The duration of this limited warranty is ONE year. The warranty period begins on the day that the RV and is delivered to the first retail purchaser by an independent authorized dealer of Cube Series or, if the dealer places the RV in service before retail sale, on the date the RV is placed in such service.

PARTS AND SERVICE REPAIR:

It is normal to expect some warranty service during the term of this limited warranty. To obtain warranty service the owner must do all the following.

1. Notify an independent, authorized dealer of Cube Series RV of the substantial defect in material or workmanship attributable to Cube Series, within the warranty coverage period designated above.
2. Provide the notification mentioned above within (30) days of when the owner discovered or should have discovered the substantial defect in material or workmanship attributable to Cube Series.
3. Promptly schedule an appointment with and take the RV to an independent, authorized dealer of Cube Series for repairs.
4. The owner is responsible for transportation costs, import duties, fees and all incidental expenses associated with obtaining warranty services and parts.

If you need assistance, you may contact Cube Series by email at service@cubeseries.com or by phone 855-718-8714

NOTE: Cube Series has no control of service work at independent, authorized dealerships. You may encounter some delay in scheduling or completion of work.

Cube Series obligation is to address, within industry standards, any covered substantial defect discovered and reported within the warranty coverage period provided. As the owner of the RV, you deliver the RV to a Cube Series manufacturing facility or an independent authorized dealer for all service claims. If the primary remedy fails to successfully cure any substantial defect caused by Cube Series workmanship or material defect/failure, after a reasonable amount of repair attempts, your sole and exclusive remedy shall be to have Cube Series pay an independent service shop of your choice to preform repairs to the substantial defect. If the substantial defect is incapable of being repaired, your exclusive remedy would be to receive a diminished value based on purchase date (diminished value payout would come into play if the repair is more than the value of the RV)

WHAT IS NOT COVERED UNDER WARRANTY

By way of example only this limited warranty does not cover the following:

- Defects in materials, components, or parts of the structure of the RV not attributable to Cube Series.
- Items that are added or changed after the RV leaves the possession of Cube Series.
- Additional equipment or accessories installed at any dealership, or other place of business, or any other party other than Cube Series.
- Any RV used for rental or other business or commercial uses.
- Any RV sold or used outside the United States, US territories or Canada.
- Any RV not used solely for recreational travel and or camping.
- Any RV purchased through auction or wholesale.
- Any RV purchased from a dealer that is not an authorized Cube Series dealer.
- Any defect arising from excess weight placed on the structural components.
- Normal wear, tear, or usage such as tears, punctures, soiling, mildew, fading, or discoloration of exterior plastic or fiberglass or soft goods, such as upholstery, drapes, carpet, vinyl, screens, cushions, mattresses, and fabrics.
- The effects of condensation or moisture within or outside the RV.
- Mold or any damage caused by mold to the inside or outside of the RV.
- Imperfections that do not affect the suitability of the RV for its intended purpose of recreational use or items that are working as designed that you are unhappy with.
- Exterior paint, gelcoat, or finishes (fiberglass is inherently strong and lightweight, but sometimes the mesh fibers under the gelcoat may be visible but does not affect the integrity of the structure)
- Damage due to moving and or traveling with Cube Series Camper or Trailer in the extended, unfolded and or up position. Cube Series Campers and Trailers ARE NOT DESIGNED FOR ANY MOVEMENT IN THE UP POSITION AT ANY SPEED.
- Problems including water leaks, related to misuse, mishandling, neglect or abuse including failure to maintain the RV with accordance to the user manual, or other routine maintenance such as inspections, lubrication, adjustments, tightening of screws or fittings, tightening of lug-nuts, sealing, rotating tires.
- Damage due to an accident, weather or not foreseeable, including any acts of weather.
- Damage or defects caused by improper or lack of winterization or de-winterization, including or not limited to, faulty or improper anti-freeze, improper winterization, or de-winterization procedure. Cube Series HIGHLY RECOMMENDS THAT CUSTOMERS SEEK EXPERIENCED PROFESSIONALS TO PERFORM THE WINTERIZATION, OR DE-WINTERIZATION PROCESS FOR ALL Cube Series RV PRODUCTS.
- Damage, rust, or corrosion due to the environment, theft, vandalism, fire, or other intervening acts not attributable to Cube Series.
- Damage caused by unregulated water pressure, tank overfill, or plumbing system modification resulting in flooding of the RV.
- Failure of the original retail purchaser or others to follow ordinary maintenance procedures as recommended by Cube Series.

- Damage caused by unprotected electrical hookups (home or campground, power surges, lightning, circuit overload, or electrical system modifications.)
- Damage caused by tire wear or tire failure.
- Damage caused by improper use of leveling jacks and or leveling system.
- Damage caused by off-road use, overloading the RV or alteration of the RV, or any of its components or parts.
- Defacing, scratches, dents, chips on any surface or fabric of the RV, damage caused infestation or animals.
- Wheel alignments or adjustments to axles when caused by improper maintenance, loading or damage from road hazards, including off-road travel, wheel damage or balancing or damage from tire failures.
- Any costs of obtaining service including by way of example, travel costs, are specifically excluded from coverage of this warranty.
- Any RV used as a residence.
- Any component, system, or part of the RV that is warranted by another entity, including by way of example, handling, braking, wheel balance, tires, tubes, batteries, gauges, generator, awning, hydraulic jacks, manual jacks, inverter, converter, microwave, Television, DVD/CD/BLU-RAY player, radio, speakers, refrigerator, range, hot water heater, water pump, stove, carbon monoxide detector, smoke detector, propane detector, furnace, or any air conditioner. The written warranty provided by any manufacturer by the component part is the direct responsibility of that manufacturer. Defects and or damage to interior and or exterior surfaces, trim, upholstery, and other appearance items may occur at the factory. These items are usually detected and corrected at the factory or by the selling dealer prior to the delivery of the retail customer. You must inspect your RV for this type of damage when you take delivery. If you find any such defect or damage you must notify the selling dealer at time of delivery to have these items covered by this limited warranty and to have work performed on the items at no cost to you as provided by this limited warranty.

LEGAL REMEDIES

ANY ACTION TO ENFORCE ANY PORTION OF THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTY, MUST BE COMMENCED WITHIN (90) DAYS AFTER THE EXPIRATION OF THE WARRANTY COVERAGE PERIOD DESIGNATED ABOVE.

WARRANTY REGISTRATIONS

Your warranty registration records should be completed and delivered to the manufacturers of component parts. The selling dealership will assist you in completing and submitting the Cube Series warranty registration form. That form must be returned to Cube Series within (30) days of taking delivery of the RV. Your Cube Series Warranty will not be registered unless this warranty registration is completed and received by Cube Series. You may register yourself by contacting warranty@cuberies.com or by visiting CubeSeries.com/Warranty.

ACCEPTANCE OF WARRANTY

When you purchase a Cube Series RV you are agreeing and accepting the warranty terms and conditions provided above. When you request or accept the performance of repairs under the terms of the limited warranty, you are confirming the acceptance of all terms of this limited warranty including, by way of example, warranty limitations and disclaimers, the forum selection clause and the clause reducing the time period within which suit must be filed for breach.

LEGAL REMEDIES JURISDICTION

EXCLUSIVE JURISDICTION FOR DECIDING LEGAL DISPUTES RELATING TO AN ALLEDGED BREACH OF WARRANTY OR OTHERWISE RELATING TO YOUR PURCHASE OR OWNERSHIP OF THE RV MUST BE FILED IN THE COURT WITHIN THE STATE OF OREGON. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE OR PROVINCE TO PROVINCE. ALL ACTIONS OF ANY KIND RELATING TO THE RV SHALL BE DECIDED BY A JUDGE RATHER THAN A JURY.

Cube Series RV inc.

63153 Nels Anderson Rd. Bend, OR, 97703

Telephone: 855-718-8714

Website: CubeSeries.com